

B R A V O™ 1 1 2

S I N G L E U N I T A M P

O P E R A T I N G G U I D E



Peavey



Intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**CAUTION:** Risk of electrical shock – DO NOT OPEN!

**CAUTION:** To reduce the risk of electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

**WARNING:** To prevent electrical shock or fire hazard, do not expose this appliance to rain or moisture. Before using this appliance, read the operating guide for further warnings.



Este símbolo tiene el propósito de alertar al usuario de la presencia de "(voltaje) peligroso" que no tiene aislamiento dentro de la caja del producto que puede tener una magnitud suficiente como para constituir riesgo de corrientazo.



Este símbolo tiene el propósito de alertar al usuario de la presencia de instrucciones importantes sobre la operación y mantenimiento en la literatura que viene con el producto.

**PRECAUCION:** Riesgo de corrientazo – No abra.

**PRECAUCION:** Para disminuir el riesgo de corrientazo, no abra la cubierta. No hay piezas adentro que el usuario pueda reparar. Deje todo mantenimiento a los técnicos calificados.

**ADVERTENCIA:** Para evitar corrientazos o peligro de incendio, no deje expuesto a la lluvia o humedad este aparato. Antes de usar este aparato, lea más advertencias en la guía de operación.



Ce symbole est utilisé pour indiquer à l'utilisateur la présence à l'intérieur de ce produit de tension non-isolée dangereuse pouvant être d'intensité suffisante pour constituer un risque de choc électrique.



Ce symbole est utilisé pour indiquer à l'utilisateur qu'il ou qu'elle trouvera d'importantes instructions sur l'utilisation et l'entretien (service) de l'appareil dans la littérature accompagnant le produit.

**ATTENTION:** Risques de choc électrique – NE PAS OUVRIR!

**ATTENTION:** Afin de réduire le risque de choc électrique, ne pas enlever le couvercle. Il ne se trouve à l'intérieur aucune pièce pouvant être réparée par l'utilisateur. Confier l'entretien à un personnel qualifié.

**AVERTISSEMENT:** Afin de prévenir les risques de décharge électrique ou de feu, n'exposez pas cet appareil à la pluie ou à l'humidité. Avant d'utiliser cet appareil, lisez les avertissements supplémentaires situés dans le guide.



Dieses Symbol soll den Anwender vor unisolierten gefährlichen Spannungen innerhalb des Gehäuses warnen, die von Ausreichender Stärke sind, um einen elektrischen Schlag verursachen zu können.



Dieses Symbol soll den Benutzer auf wichtige Instruktionen in der Bedienungsanleitung aufmerksam machen, die Handhabung und Wartung des Produkts betreffen.


**VORSICHT:** Risiko – Elektrischer Schlag! Nicht öffnen!

**VORSICHT:** Um das Risiko eines elektrischen Schlag zu vermeiden, nicht die Abdeckung entfernen. Es befinden sich keine Teile darin, die vom Anwender repariert werden könnten. Reparaturen nur von qualifiziertem Fachpersonal durchführen lassen.

**ACHTUNG:** Um einen elektrischen Schlag oder Feuergefahr zu vermeiden, sollte dieses Gerät nicht dem Regen oder Feuchtigkeit ausgesetzt werden. Vor Inbetriebnahme unbedingt die Bedienungsanleitung lesen.

# E N G L I S H

## FRONT PANEL

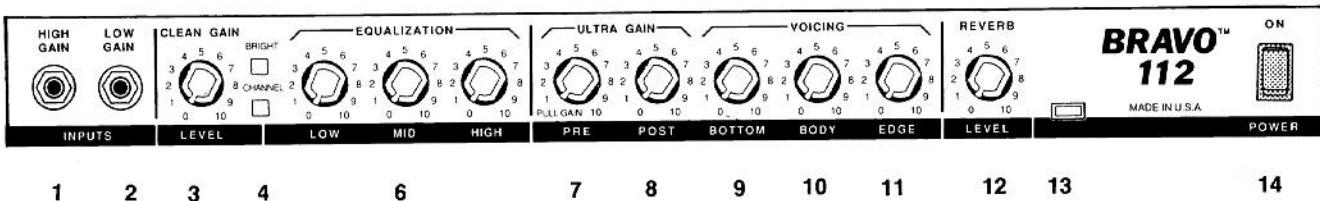

### **HIGH GAIN INPUT (1)**

Used for most electric guitars. It is 10 dB louder than the Low Gain input.

### **LOW GAIN INPUT (2)**

Provided for instruments that have extremely high outputs, which can result in overdriving (distorting) the High Gain input.

### **LEVEL CONTROL (3)**

Controls the volume level of the Normal channel and is not affected by the Post Gain control.

### **CHANNEL SELECT SWITCH (4)**

Allows selection of the Lead or Normal channel. The “in” position of the switch selects the Normal channel. The “out” position selects the Lead channel. Channel selection may also be accomplished by the remote footswitch. If remote selection is desired, the Channel Select Switch must be in the “out” (Lead) position.

### **BRIGHT SWITCH (5)**

Provides a preset boost ( $\pm 8$  dB) to treble frequencies. To activate, depress the switch to its “in” position.

### **LOW, MID, & HIGH EQ (6)**

Passive tone controls that regulate the low, mid and high frequencies, respectively.

### **PRE GAIN/PULL GAIN SWITCH (7)**

Controls the input volume level of the Ultra channel. Gain boost switch boost overall system gain. Pull to activate.

### **POST GAIN (8)**

Controls the overall volume level of the Ultra channel. The final level adjustment should be made after the desired sound has been achieved.

### **BOTTOM (9)**

An active tone control (shelving type  $\pm 15$  dB) that varies the low frequency boost or cut.

**NOTE:** This control is not functional on the Normal channel.

### **BODY (10)**

A passive tone control (notch, -15 dB) that varies the mid frequency cut.

**NOTE:** This control is functional on Lead channel only.

### **EDGE (11)**

An active tone control (shelving type,  $\pm 15$  dB) that varies the high frequency boost or cut.

**NOTE:** This control is not functional on the Normal channel.

### **REVERB LEVEL (12)**

Reverberation is an echo effect. Rotate clockwise to increase the effect. Remote footswitch can control On/Off.


### **POWER LED (13)**

Illuminates when AC power is being supplied to the amp.

### **POWER SWITCH (14)**

Depress the switch to the "On" position. The red pilot light (LED) will illuminate indicating power is being supplied to the unit.

**REAR PANEL**

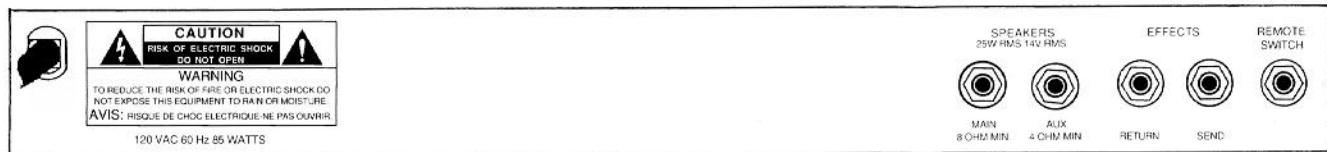

15

16

17

18

19

### **LINE CORD (120V PRODUCTS ONLY) (15)**

For your safety, we have incorporated a 3-wire line (mains) cable with proper grounding facilities. It is not advisable to remove the ground pin under any circumstances. If it is necessary to use the equipment without proper grounding facilities, suitable grounding adaptors should be used. Less noise and greatly reduced shock hazard exists when the unit is operated with the proper grounded receptacles.

### **SPEAKER OUTPUTS (16)**

Speaker outputs ( $\frac{1}{4}$ ") jacks are provided for 8 ohms and 4 ohms. When the 8 ohms jack is engaged, the amp produces full power into 8 ohms. When both jacks are engaged, the amp produces full power into 4 ohms.

### **EFFECTS RETURN (17)**

Input for returning signals from external low-level effects or signal processing equipment.


### **EFFECTS SEND (18)**

Output for supplying signals to external low-level effects or signal processing equipment.

### **REMOTE SWITCH JACK (19)**

Provided for the connection of the optional remote footswitch. Footswitch is used to select the Lead or Normal channels and defeat reverb. When using remote footswitch, always insert the plug fully (second click) to ensure proper operation.

## TONE SETTINGS

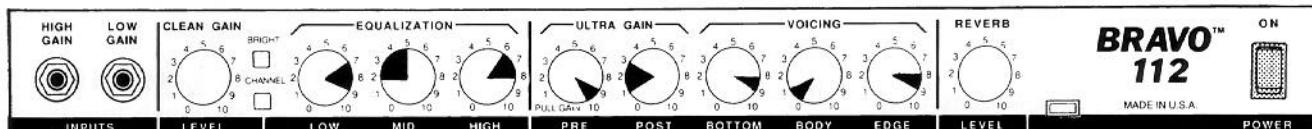


ADJUST TO TASTE

ACTIVATE  
GAIN BOOST

ADJUST TO TASTE

### CLEAN

### METAL

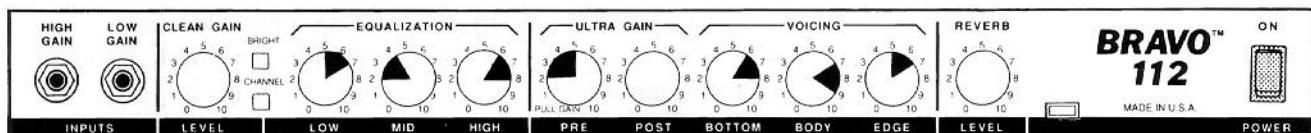


ADJUST TO TASTE

ADJUST TO TASTE

ADJUST TO TASTE

### BLUES CLEAN

### BLUES LEAD

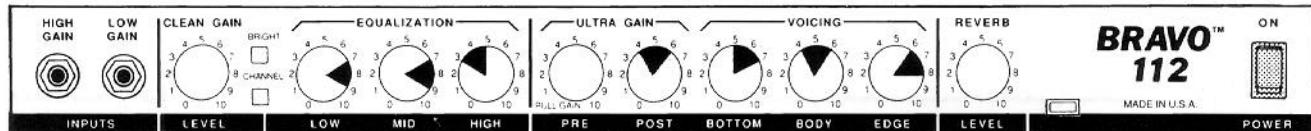

ADJUST TO TASTE

ADJUST TO TASTE

ADJUST TO TASTE

### JAZZ

### COUNTRY LEAD

Tone settings are general and will vary according to type of guitar, type and gauges of strings, type of pickup and even type of pick. Personal taste, playing style, and type of music greatly contribute to desired tonality.

## SPECIFICATIONS

### POWER AMP SECTION

2-6BQ5/EL84's with  
12AX7 driver

### Rated Power & Load:

25 W RMS into 8 or 4 ohms

### Power @ Clipping:

(Typically @ 5% THD, 1 kHz,  
120 V AC line)  
25 W RMS into 8 or 4 ohms  
(Bias must be reduced  
to measure)

### Frequency Response:

+0, -2 dB 50 Hz to 20 kHz  
@ 20 W RMS into 8 ohms

### Hum & Noise:

Greater than 80 dB below  
rated power

### Power Consumption:

85 W, 50/60 Hz, 120 V AC  
(Domestic)

### PREAMP SECTION

2-12AX7's

The following specs are measured @ 1 kHz  
with the controls preset as follows:

Push bright out

Low & High EQ @ 10, Mid EQ  
@ 0  
Pull Gain On (Out)  
Ultra Post @ 10  
Bottom, Body, & Edge @ 10  
Reverb Level @ 0  
(Nominal levels are with Pre  
Gains @ 5)  
(Minimum levels are with Pre  
Gains @ 10)

### Preamp High Gain Input:

Impedance: Very high Z,  
470 K ohm  
Ultra channel: (with channel  
select in)  
Nominal Input Level: -66 dBV,  
0.5 mV RMS  
Minimum Input Level:  
-80 dBV, 0.1 mV RMS  
Clean Channel: (with channel  
select out)  
Nominal Input Level: -18 dBV,  
130 mV RMS  
Minimum Input Level:  
-32 dBV, 25 mV RMS  
Maximum Input Level: 0 dBV,  
1.0 V RMS

### Preamp Low Gain Input: (-10 dB Pad)

Impedance: High Z, 69 K ohms  
All levels are increased by  
+10 dB

### Effects Send:

Load Impedance: 47 K ohms  
or greater  
Nominal Output: -10 dBV,  
300 mV RMS

### Effects Return:

Impedance: Very high Z,  
1 M ohm  
Designed Level: -10 dBV,  
300 mV RMS

### System Hum & Noise

#### @ Nominal Level: (Clean Channel)

(20 Hz to 20 kHz unweighted)  
Greater than 75 dB below  
rated power  
(Special noise gate circuitry for  
Ultra channel)

### Equalization:

#### (Clean channel only)


Custom Low, Mid, & High  
passive type EQ  
Push Bright: +6 dB @ 2 kHz

### Voicing:

#### (Ultra channel only)

Special Bottom, Body, &  
Edge EQ  
Pull Gain: Boosts gain in Ultra  
channel

BLOCK DIAGRAM

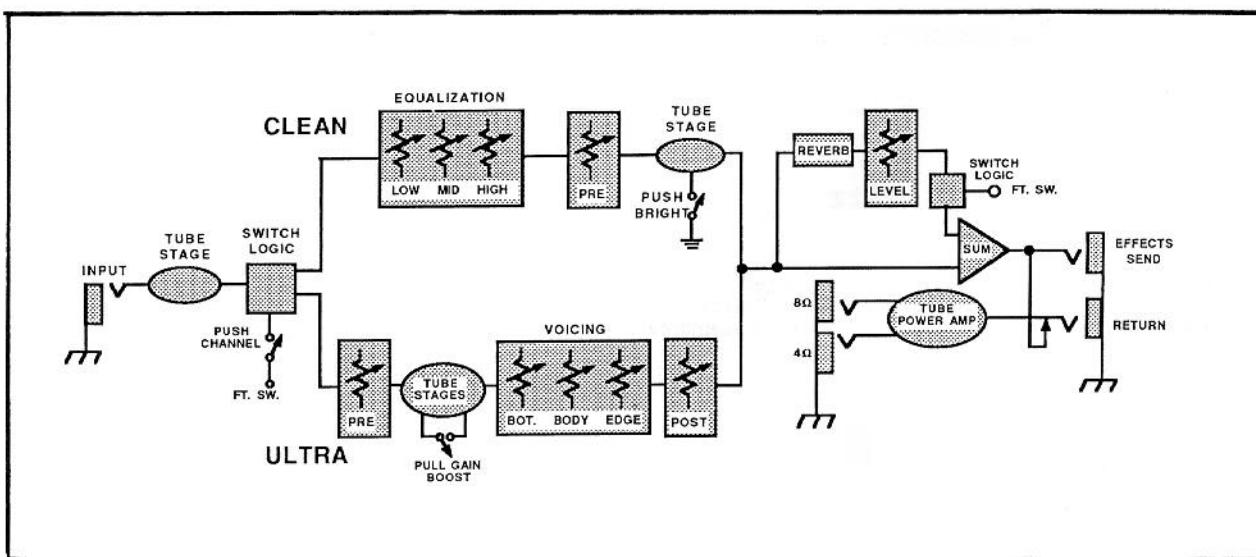

THIS BLOCK DIAGRAM SHOWS SIGNAL FLOW WITHIN THE UNIT. IN ORDER TO THOROUGHLY UNDERSTAND THE UNIT'S FUNCTIONS, PLEASE STUDY THE BLOCK DIAGRAM CAREFULLY.

## E S P A Ñ O L

**Consulte los diagramas del panel delantero en la sección de inglés de este manual.**

**HIGH GAIN INPUT (Entrada de ganancia alta) (1)**

Se usa para la mayoría de las guitarras eléctricas. Tiene 10 dB más volumen que la entrada de baja ganancia.

**LOW GAIN INPUT (Entrada de ganancia baja) (2)**

Esta entrada se proporciona para los instrumentos que tienen salidas extremadamente altas, que puede resultar con el sobreimpulso (distorsión) de la entrada de alta ganancia.

**LEVEL CONTROL (3)**

Controla el nivel de volumen del canal normal y no es afectado por el control de ganancia posterior.

**CHANNEL SELECT SWITCH (Botón para seleccionar canales) (4)**

Permite la selección del canal “lead” (instrumento solista) o normal. La posición hacia dentro activa el canal normal. La posición hacia fuera selecciona el canal “lead”. La selección del canal también se puede obtener con el pedal interruptor de control remoto. Si se desea hacer selección por control remoto, el botón para seleccionar canales tiene que estar hacia fuera o sea posición para instrumento solista (“lead”).

**BRIGHT SWITCH (Interruptor de brillo) (5)**

Proporciona un impulso de +8 dB a las frecuencias agudas. Para activar empuje el interruptor hacia dentro.

**LOW, MID, & HIGH EQ (Ecualizador de frecuencias graves, medias, y agudas) (6)**

Controles de tono pasivo que regulan las frecuencias graves, medias, y altas, respectivamente.

**PRE GAIN/PULL GAIN SWITCH (Ganancia previa/Interruptor de ganancia al tirar) (7)**

Controla el nivel de volumen a la entrada del canal “Ultra”. El interruptor de aumento de ganancia aumenta la ganancia global del sistema. Tírelo para activar.

**POST GAIN (Ganancia posterior) (8)**

Controla el nivel general de volumen del canal “Ultra”. El ajuste final de nivel debe hacerse después de que haya logrado el sonido que deseé.

**BOTTOM (Fondo) (9)**

Un control activo de tono (tipo “repisa” ±15 dB) que varía el impulso o la reducción de las frecuencias graves.

**NOTA:** Este control no funciona en el canal normal.

**BODY (Cuerpo) (10)**

Un control de tono pasivo (gradual, -15 dB) que varía la disminución de frecuencias medias.

**NOTA:** Este control es funcional solamente en el canal solista.

**EDGE (Extremo) (11)**

Un control activo de tono (tipo “repisa” ±15 dB) que varía el impulso o la reducción de las frecuencias agudas.

**NOTA:** Este control no funciona en el canal normal.

**REVERB LEVEL (Nivel de reverberación) (12)**

La reverberación es un efecto de eco. Haga girar a la derecha para aumentar el efecto. El encendido/apagado (“on/off”) se puede controlar con el pedal interruptor de control remoto.

**POWER LED (LED indicador de corriente) (13)**

Se ilumina cuando el amplificador recibe corriente alterna.

## **POWER SWITCH (Interruptor de corriente) (14)**

Oprima el interruptor a la posición “hacia dentro” (encendido). La luz roja del piloto (indicador) se encenderá indicando que la unidad está recibiendo corriente alterna.



## **LINE CORD (120 V PRODUCTS ONLY) (Cable de corriente para 120 v solamente) (15)**

Para su protección hemos incorporado un cable de 3 polos con polo a tierra. No es recomendable remover la pata del polo a tierra bajo ninguna circunstancia, se recomienda un adaptador en caso necesario. Esto reducirá ruidos y peligrosos corrientazos.

## **SPEAKER OUTPUTS (Salidas de altavoces) (16)**

Los enchufes hembras de salida de altavoces de  $\frac{1}{4}$  de pulgada se proporcionan para 8 ohmios y 4 ohmios. Cuando se usa el enchufe hembra de 8 ohmios, el amplificador produce potencia máxima en 8 ohmios. Cuando se usan ambos enchufes hembras el amplificador produce potencia máxima a 4 ohmios.

## **EFFECTS RETURN (Retorno de efectos) (17)**

Entrada para el retorno de señales procedentes de equipos de efectos externos de bajo nivel o de procesadores de señal.

## **EFFECTS SEND (Envío de efectos) (18)**

Salida para proporcionar señales a efectos exteriores de bajo nivel o a equipos procesadores de señal.

## **REMOTE SWITCH JACK (Enchufe hembra de interruptor remoto) (19)**

Se suministra para la conexión del pedal interruptor de control remoto opcional. El pedal interruptor se utiliza para seleccionar los canales solista o normal y desactivar la reverberación. Cuando utilice el pedal de control remoto, inserte siempre la clavija completamente (segundo retén) para asegurar el correcto funcionamiento.

# F R A N C A I S

Veuillez vous référer au “front panel line art”  
situé dans la section en langue anglaise de ce manuel.

## **HIGH GAIN INPUT (Entrée haut gain) (1)**

Cette prise s'utilise avec la plupart des guitares électriques. Elle donne un gain supérieur de 10 dB à l'entrée “Low Gain”.

## **LOW GAIN INPUT (Entrée faible Gain) (2)**

Cette prise accepte les instruments à très haut niveau de sortie qui causeraient de la saturation (distorsion) sur l'entrée “High Gain”.

## **LEVEL CONTROL (3)**

Contrôle le niveau de volume du canal “Normal”. Ce réglage n'est pas affecté par la commande “Post Gain”.

## **CHANNEL SELECT SWITCH (Sélecteur de canal) (4)**

Permet de sélectionner les canaux “Lead” ou “Normal”. La position “In” du sélecteur correspond au canal “Lead”. La position “Out” sélectionne le canal “Normal”. La sélection des canaux peut aussi se faire au moyen de l'interrupteur au pied. Si une sélection à distance est désirée, le sélecteur “Channel Select Switch” doit être en position “Out” (“Lead”).

## **BRIGHT SWITCH (Interrupteur “Bright”) (5)**

Accentue (de  $\pm 8$  dB) les fréquences aiguës. Enfoncer l'interrupteur à la position “In” pour mettre en service.

## **LOW, MID, & HIGH EQ (Égalisation graves, moyennes et aiguës) (6)**

Réglages de tonalité passifs réglant respectivement les fréquences graves, moyennes et aiguës.

## **PRE GAIN/PULL GAIN SWITCH (Sélecteur Pre Gain/Gain) (7)**

Contrôle le niveau de volume d'entrée du canal “Ultra”. Le commutateur “Gain Boost” hausse la valeur de gain global du système. Tirer pour mettre en service.

## **POST GAIN (8)**

Contrôle le niveau de volume global du canal “Ultra”. L'ajustement final de niveau doit être fait après avoir réalisé le son désiré.

## **BOTTOM (Graves) (9)**

Réglage de tonalité actif (type passe bas,  $\pm 15$  dB) faisant varier la coupure ou l'amplification des fréquences graves.

**NOTE:** Cette commande ne fonctionne pas sur le canal “Normal”.

## **BODY (Corps) (10)**

Bouton de réglage de tonalité passif (correction -15 dB) faisant varier la coupure des fréquences moyennes.

**NOTE:** Cette commande ne fonctionne que sur le canal “Lead”.

## **EDGE (Aigus) (11)**

Bouton de réglage de tonalité actif (type passe haut,  $\pm 15$  dB) faisant varier la coupure ou l'amplification des hautes fréquences.

**NOTE:** Cette commande ne fonctionne pas sur le canal “Normal”.

## **REVERB LEVEL (Réverbération principale) (12)**

La réverbération est un effet d'écho. Tournez dans le sens du mouvement des aiguilles d'une montre pour augmenter l'intensité de l'effet. L'interrupteur au pied peut contrôler la mise en circuit ou hors circuit (“On/Off”).

**POWER LED (DEL témoin de mise sous tension) (13)**

S'allume lorsque l'ampli reçoit l'alimentation CA.

**POWER SWITCH (Interrupteur d'alimentation) (14)**

Mettre l'interrupteur en position "On". La lampe témoin rouge (DEL) s'illumine indiquant que l'appareil est alimenté en courant.

**LINE CORD (120V products only) (Cordon d'alimentation pour appareils 120V seulement) (15)**

Pour votre sécurité, nous avons incorporé un câble d'alimentation secteur à 3 fils avec mise-à-terre appropriée. Il n'est pas recommandé d'enlever la broche de mise-à-terre en aucune circonstance. S'il est nécessaire d'utiliser l'équipement sans mise-à-terre appropriée, utilisez des adaptateurs de mise-à-terre convenables. Une bonne mise-à-terre amoindrit le bruit de fond et réduit grandement les risques de choc.

**SPEAKER OUTPUTS (Sorties de haut-parleur) (16)**

Les jacks  $\frac{1}{4}$ " (6,35mm) de sortie pour haut-parleur sont prévus pour 8 et 4 ohms. Quand le jack "8 ohm" est utilisé, l'amplificateur produit la pleine puissance sur 8 ohms. Quand les deux jacks sont utilisés, l'amplificateur produit la pleine puissance sur 4 ohms.

**EFFECTS RETURN (Retour d'effets) (17)**

Prise d'entrée pour signaux provenant d'appareils externes de traitement de signal ou d'effets à bas niveau.

**EFFECTS SEND (Envoi d'effets) (18)**

Prise de sortie servant à fournir des signaux à des appareils externes de traitement de signal ou d'effets à bas niveau.

**REMOTE SWITCH JACK (Prise pour interrupteur à distance) (19)**

Sert à brancher la pédale-interrupteur (en option). L'interrupteur au pied est utilisé pour sélectionner les canaux "Lead" ou "Normal" et mettre la réverbération hors service. Afin d'assurer un bon fonctionnement lors de l'utilisation de l'interrupteur au pied, insérez la fiche à fond jusqu'au second cran (au second clic).

# D E U T S C H

**Siehe diagramm der frontplatte im englischen teil des handbuchs.**

## **HIGH GAIN INPUT (1)**

Dieser Eingang kann für die meisten elektrischen Gitarren verwendet werden. Er ist 10 dB empfindlicher als der Low Gain Input.

## **LOW GAIN INPUT (2)**

Eingang für Instrumente mit extrem hohem Output, die den High Gain Input Übersteuern könnten.

## **LEVEL CONTROL (3)**

Bestimmt den Pegel des Normal-Kanals, und wird nicht durch den “Post Gain”-Regler beeinflusst.

## **CHANNEL SELECT SWITCH (Kanal-Wähl-Schalter) (4)**

Erlaubt das Umschalten zwischen dem Lead- und dem Normal-Kanal. Bei eingedrückten Schalter (“in”) wird der Normal-Kanal angewählt, bei ausgerastetem Schalter (“Out”) der Lead-Kanal. Die Kanal-Umschaltung kann auch über einen angeschlossenen Fuss-Schalter erfolgen. In diesem Fall muss der Kanal-Wähl-Schalter in der “Out”-(Lead)-Position sein.

## **BRIGHT SWITCH (Bright-Schalter) (5)**

Bewirkt eine voreingestellte Anhebung der hohen Frequenzen um 8 dB. Die Bright-Einstellung wird bei eingedrücktem Schalter (“In”) aktiviert.

## **LOW, MID, & HIGH EQ (6)**

Hierbei handelt es sich um passive Klangregler, die tiefe, mittlere und hohe Frequenzen entsprechend regeln.

## **PRE GAIN/PULL GAIN SCHALTER (7)**

Regelt die Eingangslautstärke des Ultra Kanals. Gain Boost-schaltet Boost des gesamten Systems. Zum Einschalten herausziehen.

## **POST GAIN (8)**

Regelt die Gesamtlautstärke des Ultra Kanals. Die endgültigen Feineinstellungen machen, nachdem der gewünschte Sound erreicht wurde.

## **BOTTOM (9)**

Eine aktive Tonkontrolle ( $\pm 15$  dB), die die Low Frequenz boostet oder abschneidet.

**MERKE:** Diese Funktion arbeitet nicht auf dem Normal-Kanal.

## **BODY (10)**

Ein passiver Klangregler (Notch, -15 dB), der die Mitten absenkt.

**MERKE:** Dieser Regler funktioniert nur auf dem Lead Kanal.

## **EDGE (11)**

Eine aktive Tonkontrolle ( $\pm 15$  dB), die die High Frequenz boostet oder abschneidet.

**MERKE:** Diese Funktion arbeitet nicht auf dem Normal-Kanal.

## **REVERB LEVEL (12)**

Eingebautes Echo-Hall-System. In Uhrzeigerrichtung drehen, um den Effekt zu verstärken. Fernbedienungs Fußschalter zum Ein- und Ausschalten des Effekts.

### **POWER LED (13)**

Zeigt die eingeschaltete Netzspannung an.

### **POWER SWITCH (Netzschalter) (14)**

Bringen Sie den Schalter auf die ON-Position. Die rote Kontrolllampe (LED) leuchtet und zeigt an, daß das Gerät eingeschaltet ist.



### **LINE CORD (120V products only) (Nur bei 120 Volt-Geräten) (15)**

Zu Ihrer Sicherheit haben wir das Gerät mit einem dreiadrigen geerdeten Netzkabel versehen. Es ist unter keinen Umständen empfehlenswert den Erdungskontakt des Anschlußkabels zu lösen. Falls es notwendig sein sollte, das Equipment ohne die vorgesehene Erdung zu betreiben empfiehlt sich die Verwendung eines Grounding Adaptors. Die geringsten Störgeräusche und die höchste Sicherheit vor elektrischen Schlägen wird jedoch durch die Benutzung der vorgesehenen Erdungsmöglichkeiten erreicht.

### **SPEAKER OUTPUTS (16)**

Lautsprecherklinkenausgänge sind für 8 und 4 Ohm vorgesehen. Wenn die 8 Ohm-Buchse belegt ist, bringt der Verstärker volle Kraft an 8 Ohm. Sind beide Buchsen belegt, bringt der Verstärker volle Kraft an 4 Ohm.

### **EFFECTS RETURN (17)**

Eingang für rückführende Signale von niederohmigen Effekten oder Signal-Prozessoren.

### **EFFECTS SEND (18)**

Ausgang für Zuliefersignale zu externen niederohmigen Effekten oder Signal-Prozessoren.

### **REMOTE SWITCH JACK (19)**

Vorgesehen für den Anschluß des als Option erhältlichen Fußschalters. Der Fußschalter kann zum Anwählen des Normal- und Leadkanals sowie zum Schalten des Halls verwendet werden. Um eine einwandfreie Funktion zu gewährleisten, ist beim Anschluß des Fußschalters darauf zu achten, daß der Stecker vollständig (bis zum 2. Klick) eingesteckt ist. Der Fußschalter kann zum Anwählen des Normal- und Leadkanals sowie zum Schalten des Halls verwendet werden. Um eine einwandfreie Funktion zu gewährleisten, ist beim Anschluß des Fußschalters darauf zu achten, daß der Stecker vollständig (bis zum 2. Klick) eingesteckt ist.

**THIS LIMITED WARRANTY VALID ONLY WHEN PURCHASED AND REGISTERED IN THE UNITED STATES OR CANADA. ALL EXPORTED PRODUCTS ARE SUBJECT TO WARRANTY AND SERVICES TO BE SPECIFIED AND PROVIDED BY THE AUTHORIZED DISTRIBUTOR FOR EACH COUNTRY.**

Ces clauses de garantie ne sont valables qu'aux Etats-Unis et au Canada. Dans tous les autres pays, les clauses de garantie et de maintenance sont fixées par le distributeur national et assurée par lui selon la législation évoquée.

Diese Garantie ist nur in den USA und Kanada gültig. Alle Export-Produkte sind der Garantie und dem Service des Importeurs der jeweiligen Landes unterworfen. Esta garantía es válida solamente cuando el producto es comprado en E.U. continentales o en Canadá. Todos los productos que sean comprados en el extranjero, están sujetos a las garantías y servicio que cada distribuidor autorizado determine y ofrezca en los diferentes países.

**PEAVEY ONE-YEAR LIMITED  
WARRANTY/REMEDY**

PEAVEY ELECTRONICS CORPORATION ("PEAVEY") warrants this product, EXCEPT for covers, footswitches, patchcords, tubes and meters, to be free from defects in material and workmanship for a period of one (1) year from date of purchase, PROVIDED, however, that this limited warranty is extended only to the original retail purchaser and is subject to the conditions, exclusions, and limitations hereinafter set forth:

**PEAVEY 90-DAY LIMITED WARRANTY ON TUBES AND METERS**

If this product contains tubes or meters, Peavey warrants the tubes or meters contained in the product to be free from defects in material and workmanship for a period of ninety (90) days from date of purchase; PROVIDED, however, that this limited warranty is extended only to the original retail purchaser and is also subject to the conditions, exclusions, and limitations hereinafter set forth.

**CONDITIONS, EXCLUSIONS, AND LIMITATIONS OF LIMITED WARRANTIES**

These limited warranties shall be void and of no effect, if:

- a. The first purchase of the product is for the purpose of resale; or
- b. The original retail purchase is not made from an AUTHORIZED PEAVEY DEALER; or
- c. The product has been damaged by accident or unreasonable use, neglect, improper service or maintenance, or other causes not arising out of defects in material or workmanship; or
- d. The serial number affixed to the product is altered, defaced, or removed.

In the event of a defect in material and/or workmanship covered by this limited warranty, Peavey will:

- a. In the case of tubes or meters, replace the defective component without charge.
- b. In other covered cases (i.e., cases involving anything other than covers, footswitches, patchcords, tubes or meters), repair the defect in material or workmanship or replace the product, at Peavey's option; and provided, however, that, in any case, all costs of shipping, if necessary, are paid by you, the purchaser.

**THE WARRANTY REGISTRATION CARD SHOULD BE ACCURATELY COMPLETED AND MAILED TO AND RECEIVED BY PEAVEY WITHIN FOURTEEN (14) DAYS FROM THE DATE OF YOUR PURCHASE.**

In order to obtain service under these warranties, you must:

- a. Bring the defective item to any PEAVEY AUTHORIZED DEALER or AUTHORIZED PEAVEY SERVICE CENTER and present therewith the ORIGINAL PROOF OF PURCHASE supplied to you by the AUTHORIZED PEAVEY DEALER in connection with your purchase from him of this product. If the DEALER or SERVICE CENTER is unable to provide the necessary warranty service you will be directed to the nearest other PEAVEY AUTHORIZED DEALER or AUTHORIZED PEAVEY SERVICE CENTER which can provide such service.

**OR**

- b. Ship the defective item, prepaid, to:

PEAVEY ELECTRONICS CORPORATION  
International Service Center  
326 Hwy. 11 & 80 East  
MERIDIAN, MS 39301

including therewith a complete, detailed description of the problem, together with a legible copy of the original PROOF OF PURCHASE and a complete return address. Upon Peavey's receipt of these items:

If the defect is remedial under these limited warranties and the other terms and conditions expressed herein have been complied with, Peavey will provide the necessary warranty service to repair or replace the product and will return it, FREIGHT COLLECT, to you, the purchaser.

Peavey's liability to the purchaser for damages from any cause whatsoever and regardless of the form of action, including negligence, is limited to the actual damages up to the greater of \$500.00 or an amount equal to the purchase price of the product that caused the damage or that is the subject of or is directly related to the cause of action. Such purchase price will be that in effect for the specific product when the cause of action arose. This limitation of liability will not apply to claims for personal injury or damage to real property or tangible personal property allegedly caused by Peavey's negligence. Peavey does not assume liability for personal injury or property damage arising out of or caused by a non-Peavey alteration or attachment, nor does Peavey assume any responsibility for damage to interconnected non-Peavey equipment that may result from the normal functioning and maintenance of the Peavey equipment.

UNDER NO CIRCUMSTANCES WILL PEAVEY BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, ANY INCIDENTAL DAMAGES, OR ANY CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT, EVEN IF PEAVEY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

THESE LIMITED WARRANTIES ARE IN LIEU OF ANY AND ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR USE; PROVIDED, HOWEVER, THAT IF THE OTHER TERMS AND CONDITIONS NECESSARY TO THE EXISTENCE OF THE EXPRESSED, LIMITED WARRANTIES, AS HEREINAFTER STATED, HAVE BEEN COMPLIED WITH, IMPLIED WARRANTIES ARE NOT DISCLAIMED DURING THE APPLICABLE ONE-YEAR OR NINETY-DAY PERIOD FROM DATE OF PURCHASE OF THIS PRODUCT.

SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THESE LIMITED WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

THESE LIMITED WARRANTIES ARE THE ONLY EXPRESSED WARRANTIES ON THIS PRODUCT, AND NO OTHER STATEMENT, REPRESENTATION, WARRANTY, OR AGREEMENT BY ANY PERSON SHALL BE VALID OR BINDING UPON PEAVEY.

In the event of any modification or disclaimer of expressed or implied warranties, or any limitation of remedies, contained herein conflicts with applicable law, then such modification, disclaimer or limitation, as the case may be, shall be deemed to be modified to the extent necessary to comply with such law.

Your remedies for breach of these warranties are limited to those remedies provided herein and Peavey Electronics Corporation gives this limited warranty only with respect to equipment purchased in the United States of America.

**INSTRUCTIONS — WARRANTY REGISTRATION CARD**

1. Mail the completed WARRANTY REGISTRATION CARD to:

PEAVEY ELECTRONICS CORPORATION  
POST OFFICE BOX 2898  
MERIDIAN, MISSISSIPPI 39302-2898

- a. Keep the PROOF OF PURCHASE. In the event warranty service is required during the warranty period, you will need this document. There will be no identification card issued by Peavey Electronics Corporation.
2. IMPORTANCE OF WARRANTY REGISTRATION CARDS AND NOTIFICATION OF CHANGES OF ADDRESSES:
  - a. Completion and mailing of WARRANTY REGISTRATION CARDS — Should notification become necessary for any condition that may require correction, the REGISTRATION CARD will help ensure that you are contacted and properly notified.
  - b. Notice of address changes — If you move from the address shown on the WARRANTY REGISTRATION CARD, you should notify Peavey of the change of address so as to facilitate your receipt of any bulletins or other forms of notification which may become necessary in connection with any condition that may require dissemination of information or correction.
3. You may contact Peavey directly by telephoning (601) 483-5365.

## **IMPORTANT SAFETY INSTRUCTIONS**

**WARNING:** When using electric products, basic cautions should always be followed, including the following.

1. Read all safety and operating instructions before using this product.
2. All safety and operating instructions should be retained for future reference.
3. Obey all cautions in the operating instructions and on the back of the unit.
4. All operating instructions should be followed.
5. This product should not be used near water, i.e., a bathtub, sink, swimming pool, wet basement, etc.
6. This product should be located so that its position does not interfere with its proper ventilation. It should not be placed flat against a wall or placed in a built-in enclosure that will impede the flow of cooling air.
7. This product should not be placed near a source of heat such as a stove, radiator, or another heat producing amplifier.
8. Connect only to a power supply of the type marked on the unit adjacent to the power supply cord.
9. Never break off the ground pin on the power supply cord. For more information on grounding, write for our free booklet "Shock Hazard and Grounding."
10. Power supply cords should always be handled carefully. Never walk or place equipment on power supply cords. Periodically check cords for cuts or signs of stress, especially at the plug and the point where the cord exits the unit.
11. The power supply cord should be unplugged when the unit is to be unused for long periods of time.
12. If this product is to be mounted in an equipment rack, rear support should be provided.
13. Metal parts can be cleaned with a damp rag. The vinyl covering used on some units can be cleaned with a damp rag or an ammonia-based household cleaner if necessary. Disconnect unit from power supply before cleaning.
14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation holes or any other openings.
15. This unit should be checked by a qualified service technician if:
  - a. The power supply cord or plug has been damaged.
  - b. Anything has fallen or been spilled into the unit.
  - c. The unit does not operate correctly.
  - d. The unit has been dropped or the enclosure damaged.
16. The user should not attempt to service this equipment. All service work should be done by a qualified service technician.
17. This product should be used only with a cart or stand that is recommended by Peavey Electronics.
18. Exposure to extremely high noise levels may cause a permanent hearing loss. Individuals vary considerably in susceptibility to noise induced hearing loss, but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a sufficient time. The U.S. Government's Occupational Safety and Health Administration (OSHA) has specified the following permissible noise level exposures.

Duration Per Day In Hours	Sound Level dBA, Slow Response
8	90
6	92
4	95
3	97
2	100
1 1/2	102
1	105
1/2	110
1/4 or less	115

According to OSHA, any exposure in excess of the above permissible limits could result in some hearing loss.

Ear plugs or protectors in the ear canals or over the ears must be worn when operating this amplification system in order to prevent a permanent hearing loss if exposure is in excess of the limits as set forth above. To ensure against potentially dangerous exposure to high sound pressure levels, it is recommended that all persons exposed to equipment capable of producing high sound pressure levels such as this amplification system be protected by hearing protectors while this unit is in operation.

**SAVE THESE INSTRUCTIONS!**



Features and specifications subject to change without notice.

**Peavey Electronics Corporation** 711 A Street / Meridian, MS 39301 / U.S.A. / (601) 483-5365 / Telex 504115 / Fax 486-1278  
©1994 #80301262 Printed in U.S.A. 2/94