
OWNERS MANUAL



TNT° 150 WEDGE

WARNING: TO PREVENT ELECTRICAL SHOCK OR FIRE HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. BEFORE USING THIS APPLIANCE, READ THE OPERATING GUIDE FOR FURTHER WARNINGS. 5

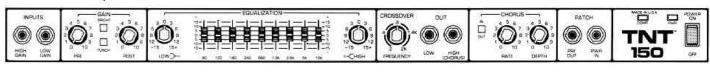

10

12

HIGH GAIN INPUT (1)

Used for most electric guitars. It is 6 dB louder than the Low Gain input.

8

LOW GAIN INPUT (2)

Provided for instruments that have extremely high outputs, which can result in overdriving (distorting) the High Gain input. If both inputs are used simultaneously, the output levels are the same (both are Low Gain).

PRE GAIN (3)

2

Controls the input volume level of the channel.

7

BRIGHT SWITCH (4)

Provides a preset boost (+6 dB) to treble frequencies. To activate, depress the switch to its "in" position.

PUNCH SWITCH (5)

Provides a preset boost (+/- 8 dB) to treble frequencies. To activate, depress the switch to its "in" position.

POST GAIN (6)

Controls the overall volume level of the amplifier. The final level adjustment should be made after the desired sound has been achieved.

LOW EQ (7)

An active tone control (shelving type, +/- 15 dB) that varies the low frequency range. Caution: excessive low frequency boost causes greater power consumption and increases possibility of speaker damage.

9-BAND GRAPHIC EQ (8)

Provides +/- 15 dB equalization at each center frequency.

HIGH EQ CONTROL (9)

An active tone control (shelving type, +/- 15 dB) that varies the high frequency range.

CROSSOVER FREQUENCY CONTROL (10)

Adjusts the frequency of the crossover dividing network.

CROSSOVER FUNCTION

The amplifier is equipped with a variable electronic crossover network, which allows its use as part of a biamplified system. A "biamped" system is one in which low-frequency and high-frequency signals are reproduced by separate power amplifiers and speaker enclosures. Biamped systems provide increased headroom, greater clarity, and superior power handling. An effective biamplified system may be created using the amplifier with another Peavey product, the 210HP powered enclosure. To establish this system, connect the Crossover High output to the input of the 210HP. Connect the Crossover Low output to the amplifier's Power Amp input. High quality shielded cables should be used for these connections. The Crossover Frequency control should be set at 250 to 300 Hz.

LOW RANGE OUTPUT (11)

Provides a post-crossover low range signal to the power amplifier. Signal level is adjusted by the Post Gain Control and the Crossover Balance Control.

HIGH RANGE OUTPUT (12)

Provides a post-crossover high range signal to the power amplifier. Signal level is adjusted by the Post Gain Control and the Crossover Balance Control.

Signals which appear at this jack may be processed by the chorus circuit.

CHORUS IN/OUT SWITCH (13)

Is used to activate/defeat the chorus circuit. To activate the circuit, depress the switch to its "in" position.

RATE CONTROL (14)

Controls the sweep rate (frequency) of the chorus effect.

DEPTH CONTROL (15)

Controls the depth (intensity) of the chorus effect.

PREAMP OUT/POWER AMP IN (16)

These jacks are provided for in-line patching of effects devices. To patch an effects unit, connect the Preamp Output to the Input of the device. Next, connect the output of the device to the Power Amp Input (high-quality shielded cables must be used for these connections). The Preamp Output can also be used to route the amplified signal to a mixing console, tape recorder, etc. Connect the Preamp Output, using a shielded cable, to an input of the tape recorder, mixer, etc. This patch does not affect the operation of the amplifier. NOTE: The preamp output level is approximately 1 volt RMS and is of relatively low impedance (600 ohms). Any effects device used in this effects loop must be capable of receiving 1 volt input and providing 1 volt output in order to properly drive the power amp. The Power Amp Input has an internal switch which disconnects the internal preamp.

DDT™ COMPRESSION (17)

The amplifier is equipped with the patented DDT™ compression circuit (U.S. Patent 4,318,053). The compression circuit eliminates audible power amp clipping, reduces distortion, and protects the loudspeaker.

In use, the Compressor LED may occasionally illuminate, indicating that the compressor is engaging to prevent distortion. If the LED is continuously illuminated, Gain control or Low EQ control settings should be reduced to prevent possible loudspeaker damage.


POWER LED (18)

Illuminates when AC power is being supplied to the amp.

POWER SWITCH (19)

Depress the switch to the "On" position. The red pilot light (LED) will illuminate indicating power is being supplied to the unit.

BACK PANEL

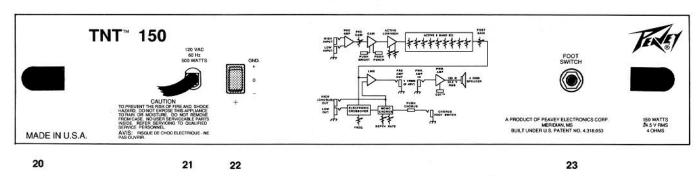

LINE (MAINS) CORD RETAINERS (20)

Allow storage of mains cable for travel.

LINE CORD (120V PRODUCTS ONLY) (21)

For your safety, we have incorporated a 3-wire line (mains) cable with proper grounding facilities. It is not advisable to remove the ground pin under any circumstances. If it is necessary to use the equipment without proper grounding facilities, suitable grounding adaptors should be used. Less noise and greatly reduced shock hazard exists when the unit is operated with the proper grounding receptacles.

GROUND SWITCH (22)

Three position rocker-type switch which, in most applications, should be operated in its center or zero position. There may be some situations when audible hum and/or noise will come from the loudspeaker. If this situation arises, position the ground switch to either positive or negative (+ or -) or until the noise is minimized.

NOTE: Should the noise problem continue, consult your Authorized Peavey Dealer, the Peavey Factory, or a qualified service technician. THE GROUND SWITCH IS NOT FUNCTIONAL ON 220/240 VOLT MODELS.

CHORUS REMOTE SWITCH JACK (23)

Provided for the connection of the optional remote footswitch. The footswitch is used to activate/defeat the chorus circuit.


The EDI™ works at the power amp output stage just before the speaker, and has beeen equalized to closely duplicate an average tonal response of the most respected guitartype loudspeakers currently available today. Most guitartype speakers exhibit frequency response curves that are very similiar.


The EDI™ takes this similarity into consideration and allows the "mix-engineer" to more closely duplicate the guitarist's tonality without drastic equalization at the mixer.

The EDI™ also includes an adjustment for timbre (harmonic balance) which helps even further to closely duplicate hte tonality produced approximately 30 feet in front of the amplifier. This system has a 600 ohm transformer **balanced** output which is designed for long, "snake" cable runs.

NOTE: Timbre may be adjusted by removing plate and adjusting trim pot for desired tonality.

Clockwise rotation of the control yields a peak in the upper mid range to simulate certain speaker tonalities. Counterclockwise produces smoother response with less highs.

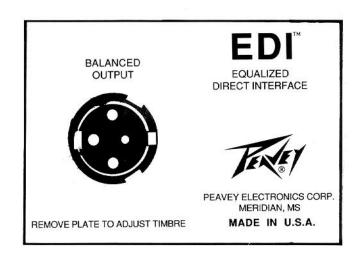

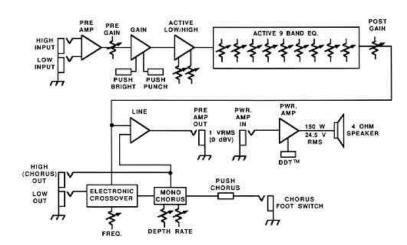

This block diagram shows signal flow within the unit. In order to thoroughly understand the unit's functions, please study the block diagram carefully.

SPECIFICATIONS

RATED AMPLIFIER SECTION RATED POWER & LOAD

150 Watts is to 8 ohms with DDT™ compression

POWER @ CLIPPING: (Typical)

(1 kHz, 120V AC line) 155W RMS into 4 ohms @ 1% THD 165W RMS into 4 ohms @ 5% THD

FREQUENCY RESPONSE:

+0, -2 dB, 20 Hz to 30 kHz, @ 140 Watts RMS into 4 ohms

TOTAL HARMONIC DISTORTION:

Less than 0.2%, 100 mW to 140 Watts RMS, 20 Hz to 10 kHz, 4 ohms (typically below 0.1%)

DDT" DYNAMIC RANGE:

Greater than 20 dB

DDT" MAXIMUM THD:

Below 0.6% THD for 6 dB overload Below 1% THD for 16 dB overload

HUM & NOISE:

Greater than 90 dB below rated power

POWER CONSUMPTION: (Domestic) 400 Watts @ 120V AC, 50/60 Hz

PREAMP SECTION

The following specs are measured @ 1 kHz with the Low, High & Graphic EQ @ 0 dB; Push Bright, Push Punch & Push Chorus out (off); Post Gain @ 10. Nominal levels are with Pre Gain @ 5; minimum levels are with Pre Gain @ 10

PREAMP HIGH GAIN INPUT:

Impedance: High Z, 220 K ohms Nominal Input Level: -20 dBv, 100 mV RMS Minimum Input Level; -40 dBv, 10 mV RMS

Maximum Input Level: +10 dBv, 3V RMS

PREAMP LOW GAIN INPUT: (6 dB pad)

Impedance: High Z, 44K ohms Nominal Input Level: -14 dBv, 200 mV RMS Minimum Input Level: -34 dBv, 20 mV RMS Maximum Input Level: +16 dBv, 6V RMS

CROSSOVER HIGH/CHORUS OUTPUT: (High Pass Signal)

Load Impedance: 1K ohms or greater Nominal Output Level: 0 dBv, 1.0V RMS (at the DDT™ limit of 150W RMS output) Maximum Output Level: +18 dBV, 8 V RMS

CROSSOVER LOW OUTPUT: (Low Pass Signal)

Load Impedance: 1K ohms or greater Nominal Output Level: 0 dBv, 1.0V RMS (at the DDT™ limit of 150 W RMS output) Maximum Output Level: +18 dBV, 8V RMS

PREAMP OUTPUT: (Full Range Output):

Load impedance: 1 K ohms or greater Nominal Output: 0 dBv, 1.0V RMS (at the DDT™ limit of 150W RMS output) Maximum Output Level: +18 dBV, 8V RMS

POWER AMP INPUT:

Impedance: High Z, 22 K ohms
Designed Input Level: 0 dBv, 1V RMS
(Switching jack providing preamp out to
power amp in connection when not
used)

SYSTEM HUM & NOISE @ NOMINAL INPUT LEVELS:

(20 Hz to 20 kHz unweighted) 85 dB below rated power

EQUALIZATION:

Low & High: +/- 15 dB @ 80 Hz & 8 kHz, shelving. 9 band graphic: +/- 15 dB @ 80, 120, 180, 340, 660, 1.3K, 2.6K, 5K, 10K Peak/Notch Push bright: +8 dB @ 2 kHz Push Punch: Special EQ

VARIABLE CROSSOVER:


Frequency range: 200 Hz to 2 kHz Slope: 12 dB/Octave

CHORUS:


Controls: Depth and rate with Push Switch Source: Crossover High Pass Output Signal Re-Mix: With Full Range Output & High Pass Output


Footswitch: External Single Button

TONE SETTING CHART

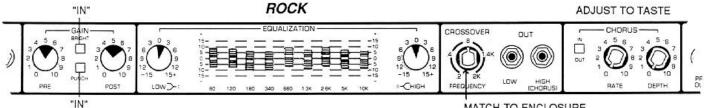

MATCH TO ENCLOSURE SPECIFICATIONS. NORMALLY ADJUSTED FROM 200 - 300Hz. (BIAMPED OPERATION)

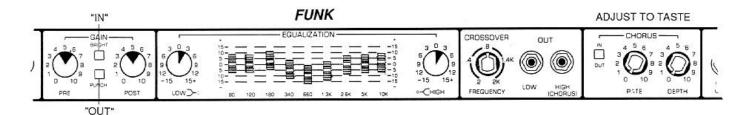

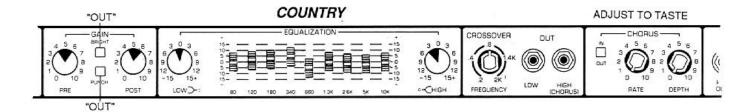

Tone settings given are general and will vary according to type of guitar, type and gauges of strings, type of pickup and even type of pick. Personal taste, playing style, and type of music greatly contribute to desired tonality.

THIS LIMITED WARRANTY VALID ONLY WHEN PURCHASED AND REGISTERED IN THE UNITED STATES OR CANADA. ALL EXPORTED PRODUCTS ARE SUBJECT TO WARRANTY AND SERVICES TO BE SPECIFIED AND PROVIDED BY THE AUTHORIZED DISTRIBUTOR FOR EACH COUNTRY.

Ces clauses de garantie ne sont vaiables qu'aux Etats-Unis et au Canada. Dans tous les autres pays, les clauses de garantie et de maintenance sont fixees par le distributeur national et

assuree par lui seion la legislation en vigueur.

Diese Garantie ist nur in den USA and Kanada guitig. Alle Export-Produkte sind der Garantie und dem Service des Importeurs des jeweiligen Landes unterworfen.

Esta garantia es valida solamente cuando el producto es comprado en E.U. continentales o en Canada. Todos los productos que sean comprados en el extranjero, estan sujetos a las garantias y servicio que cada distribuidor autorizado determine y ofrezca en los diferentes países.

ONE-YEAR LIMITED WARRANTY/REMEDY

PEAVEY ELECTRONICS CORPORATION ("PEAVEY") warrants this product, EXCEPT for covers, footswitches, patchcords, tubes and meters, to be free from defects in material and workmanship for a period of one (1) year from date of purchase, PROVIDED, however that this limited warranty is extended only to the original retail purchaser and is subject to the conditions, exclusions and limitations hereinafter set forth.

PEAVEY 90-DAY LIMITED WARRANTY ON TUBES AND METERS

If this product contains tubes or meters, Peavey warrants the tubes or meters contained in the product to be free from defects in material and workmanship for a period of ninety (90) days from date of purchase; PROVIDED, however, that this limited warranty is extended only to the original retail purchaser and is also subject to the conditions, exclusions and limitations hereinafter set forth.

CONDITIONS, EXCLUSIONS AND LIMITATIONS OF LIMITED WARRANTIES

These limited warranties shall be void and of no effect if:

- a. The first purchase of the product is for the purpose of resale; or
- b. The original retail purchase is not made from an AUTHORIZED PEAVEY DEALER; or
- The product has been damaged by accident or unreasonable use, neglect, improper service or maintenance, or other causes not arising out of defects in material or
- d. The serial number affixed to the product is altered, defaced or removed.
- In the event of a defect in material and/or workmanship covered by this limited warranty, Peavey will:
- a. In the case of tubes or meters, replace the defective component without charge;
 b. In other covered cases (i.e., cases involving anything other than covers, footswitches, patchcords, tubes or meters), repair the defect in material or workmanship or replace

the product, at Peavey's option;
and provided, however, that, in any case, all costs of shipping, if necessary, are paid by you, the purchaser.

THE WARRANTY REGISTRATION CARD SHOULD BE ACCURATELY COMPLETED AND MAILED TO AND RECEIVED BY PEAVEY WITHIN FOURTEEN (14) DAYS FROM THE DATE OF YOUR PURCHASE.

In order to obtain service under these warranties, you must:
a. Bring the defective item to any AUTHORIZED PEAVEY DEALER or AUTHORIZED PEAVEY SERVICE CENTER and present therewith the ORIGINAL PROOF OF PURCHASE supplied to you by the AUTHORIZED PEAVEY DEALER in connection with your purchase from him of this product. If the DEALER or SERVICE CENTER is unable to provide the necessary warranty service you will be directed to the nearest other PEAVEY AUTHORIZED DEALER or AUTHORIZED PEAVEY SERVICE CENTER which can provide such service.

including therewith a complete, detailed description of the problem, together with a legible copy of the original PROOF OF PURCHASE and a complete return address. Upon Peavey's receipt of these items:

If the defect is remedial under these limited warranties and the other terms and conditions expressed herein have been complied with, Peavey will provide the necessary warranty service to repair or replace the product and will return it, FREIGHT COLLECT, to you, the purchaser.

Peavey's liability to the purchaser for damages from any cause whatsoever and regardless of the form of action, including negligence, is limited to the actual damages up to the greater of \$500.00 or an amount equal to the purchase price of the product that caused the damage or that is the subject of or is directly related to the cause of action. Such purchase price will be that in effect for the specific product when the cause of action arose. This limitation of liability will not apply to claims for personal injury or damage to real property or tangible personal property allegedly caused by Peavey's negligence. Peavey does not assume liability for personal injury or property damage arising out of or caused by a non-Peavey alteration or attachment, nor does Peavey assume any responsibility for damage to interconnected non-Peavey equipment that may result from the normal functioning and

maintenance of the Peavey equipment.

UNDER NO CIRCUMSTANCES WILL PEAVEY BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, ANY INCIDENTAL DAMAGES OR ANY CONSEQUENTIAL DAMAGES.

UNDER NO CIRCUMSTANCES WILL PEAVEY BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, ANY INCIDENTAL DAMAGES OR ANY CONSEQUENTIAL DAMAGES. ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT, EVEN IF PEAVEY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
THESE LIMITED WARRANTIES ARE IN LIEU OF ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF

MERCHANTABILITY AND FITNESS FOR A PARTICULAR USE; PROVIDED, HOWEVER, THAT IF THE OTHER TERMS AND CONDITIONS NECESSARY TO THE EXISTENCE OF THE EXPRESS, LIMITED WARRANTIES, AS HEREINABOVE STATED, HAVE BEEN COMPLIED WITH, IMPLIED WARRANTIES ARE NOT DISCLAIMED DURING THE APPLICABLE ONE-YEAR OR NINETY-DAY PERIOD FROM DATE OF PURCHASE OF THIS PRODUCT.

SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL

DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THESE LIMITED WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

THESE LIMITED WARRANTIES ARE THE ONLY EXPRESS WARRANTIES ON THIS PRODUCT, AND NO OTHER STATEMENT, REPRESENTATION, WARRANTY OR

AGREEMENT BY ANY PERSON SHALL BE VALID OR BINDING UPON PEAVEY.

In the event of any modification or disclaimer of express or implied warranties, or any limitation of remedies, contained herein conflicts with applicable law, then such modification, disclaimer or limitation, as the case may be, shall be deemed to be modified to the extent necessary to comply with such law.

Your remedies for breach of these warranties are limited to those remedies provided herein and Peavey Electronics Corporation gives this limited warranty only with respect to

equipment purchased in the United States of America.

INSTRUCTIONS - WARRANTY REGISTRATION CARD

1. Mail the completed WARRANTY REGISTRATION CARD to:

PEAVEY ELECTRONICS CORPORATION POST OFFICE BOX 2898

MERIDIAN, MISSISSIPPI 39302-2898

a. Keep the PROOF OF PURCHASE. In the event warranty service is required during the warranty period, you will need this document. There will be no identification card issued by Peavey Electronics Corporation.

2. IMPORTANCE OF WARRANTY REGISTRATION CARDS AND NOTIFICATION OF CHANGES OF ADDRESS:

- a. Completion and mailing of WARRANTY REGISTRATION CARDS AND NOTIFICATION OF CHANGES OF ADDRESS:

 a. Completion and mailing of WARRANTY REGISTRATION CARDS Should notification become necessary for any condition that may require correction, the REGISTRATION CARD will help ensure that you are contacted and properly notified.

 b. Notice of address changes If you move from the address shown on the WARRANTY REGISTRATION CARD, you should notify Peavey of the change of address so as to facilitate your receipt of any bulletins or other forms of notification which may become necessary in connection with any condition that may require dissemination of information or correction.

You may contact Peavey directly by telephoning (601) 483-5365.

4. Please have the Peavey product name and serial number available when communicating with Peavey Customer Service.

DANGER EXPOSURE TO EXTREMELY HIGH NOISE LEVELS MAY CAUSE A PERMANENT HEARING LOSS. INDIVIDUALS VARY CONSIDERABLY IN SUSCEPTIBILITY TO NOISE INDUCED HEARING LOSS, BUT NEARLY EVERYONE WILL LOSE SOME HEARING IF EXPOSED TO SUFFICIENTLY INTENSE NOISE FOR A SUFFICIENT TIME. THE U.S. GOVERNMENT'S OCCUPATIONAL SAFETY AND HEALTH ADMINISTRATION (OSHA) HAS SPECIFIED THE FOLLOWING PERMISSIBLE NOISE LEVEL EXPOSURES: DURATION PER DAY IN HOURS SOUND LEVEL 48A, SLOW RESPONSE 00 ACCORDING TO OSHA, ANY EXPOSURE IN EXCESS OF THE ABOVE PERMISSIBLE LIMITS COULD RESULT IN SOME HEARING LOSS. EAR PLUGS OR PROTECTORS IN THE EAR CANALS OR OVER THE EARS MUST BE WORN WHEN CHERKTING THIS AMPLIFICATION SYSTEM IN CHERCOLOGY SPOOL BY THE EAR OF THE EARS MUST BE WORN WHEN CHERKTING THIS AMPLIFICATION SYSTEM IN CHERCOLOGY SPOOL BY TO HIGH SOLIND PRESCURE YOUR STORE OF THE EARS MUST BE SUPPLYED TO HIGH SOLIND PRESCURE YOUR STORE AND STORE AND THE EAR OF THE EARS MUST BE SUPPLYED. CAUTION CAU HHICH MAY REQUIRE OCCASIONAL PEAK POWER 10 HANDLE TO THE MAXIMUM POWERLEVELS IN THE GOMMENDED SINCE HIVERY LOW SETTINGS OF THE GARR CONTROLS IF THE INPUT anismas 35 VERY STRONG. 1. Resc all safety and operating instructions before using this product 2. All safety and operating instructions should be retained for future reference. No war break off the ground pin of the power supply const. For more information on grounding write for our free booklet "Shock Hazard and Grounding." 14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation holes or any other openings. Obey all cautions in the operating instructions and on the back of the unit. Power supply cords should always be handled carefully. Never walk or place equipment on power supply cords. Periodically check cords for cuts or signs of stress, especially at the plug and the point where the cord exits the unit. All operating instructions should be followed. 15. This unit should be checked by a qualified service technician if: This product should not be used near water, i.e. a bathtub, sink, swimming pool, wet basement, etc. technician if: A. The power supply cord or plug has been damaged. B. Anything has fallen or been spilled into the unit. C. The unit does not operate correctly. D. The unit has been dropped or the enclosure damaged. This product should be located so that its position does not interfere with its proper ventilation. It should not be placed flat against a wall or placed in a built-in enclosure that will impede the flow of cooling air. The power supply cord should be unplugged when the unit is to be unused for long periods of time. If this product is to be mounted in an equipment rack, rear support should be provided. This product should not be placed near a source of heat such as a stove, radiator or another heat producing amplifier. The user should not to attempt to service this equipment. All service work should be done by a qualified service

